

User Guide

Requirements

oneSIM card and a USB Smart card reader.

What is Authentication key?

Authentication key is a unique key printed on every card. It enables you to access the configuration server in order to operate with the software toolkit.

How to begin?

Make sure you've got oneSIM software toolkit downloaded to your computer. Launch it, press *Config*, an input dialog will show where it asks you to type your authentication key.

Authentication key, where can I find that?

The authentication key is located on the front of the SIM card.

Done that, now how can I configure my card?

Press Settings, select your desired country and operator, press *Continue*. If you want to configure your oneSIM card for iPhone activation, select country Apple and operator iP2Go (iPhone activation-2-Go).

I am missing some operators, how come?

Our configuration technology is based on card sharing service, it means if you are missing an operator from your country for example, you can simply share this operator with other users by inserting the operator SIM card into your USB Smart card reader and pressing *Submit*. The card will be identified automatically by our server and submitted if it doesn't exist already. The configuration server is expected to be online 24/7, which should result to a quick and instant service for our customers.

Please note that this function does not require any authentication/login.