


Operating Instruction

HD LED Android Rear-seat Entertainment System

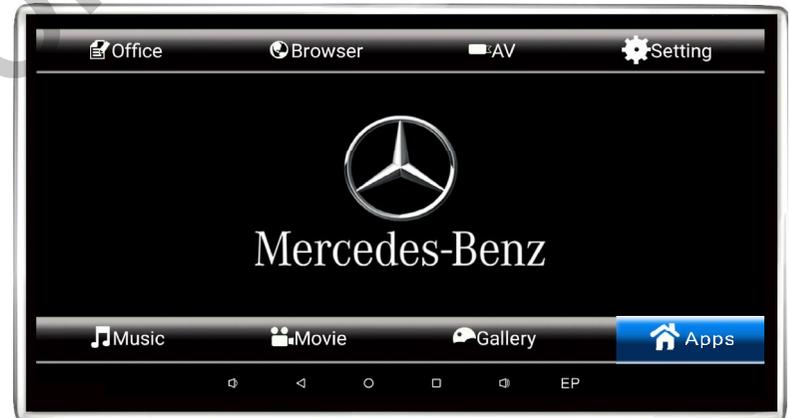

Contents

Functional charecteristics.....	1
Profile drawing.....	1
Wiring mode.....	2
Desktop application.....	2
Function setup.....	3
Installation mode.....	4
Trouble shooting.....	5
Attention.....	5

Trouble shooting

Trouble	Possible causes
No sound and image	Power disconnected or the device off
Black screen	Undervoltage
Abnormal start	1. Press the power key and then press and hold it for 3s to shut it down 2. Press the reset key to restat the system
WIFI can not connected	Refresh the network or close and re-open WIFI
Color shift	Wrong function menu setup incorrect model
No power	1. Incorrect voltage:inspect the connection cables 2. Dinsconnection of fuse:replace the fuse specification
Failure to read HD/USB/TF/audio/video files	1. Re-insert the HD/USB/TF into the ports at the side of the device 2. Select options in audio and video player
Bluetooth headset without voice	1. Long press the headset power key until the red and blue lights staggered,loosen the key wait the bluetooth pairing. 2. Make sure the main engine only connect with one bluetooth headset 3. Charging battery for bluetooth headset.


Attention

1. Do not put the device in rain or damp environment,to avoid fire hazards and electrical damage.
2. Do not repair the device on your own.Please shut down the device and notify us immediately.In case of any problem,the company or the distributor will assign specialized personnel for disassembly and repair.
3. Keep the device away from moisture,dust and oil,and do not expose it to direct aulight.
4. Do not wipe the device with diluent or other cleaning agents.Please clean the device with soft cloth soaked with special cleaning agent.
5. Please keep the device in appropriate environment(storage temperature: -20℃~80℃ and operation temperature:-10℃~60℃.
6. Please ensure the operation of the device is not affected by other devices.
7. For the sake of safety,please do not ture on or operate the device during deive.In some countries and regions,it may be illegal.
8. Power supply:DC 12V

Notice:

It may have some small and bright point in the screen, it's a very general phenomenon of technology,it do not shoes the device have quality problem.

Wiring mode

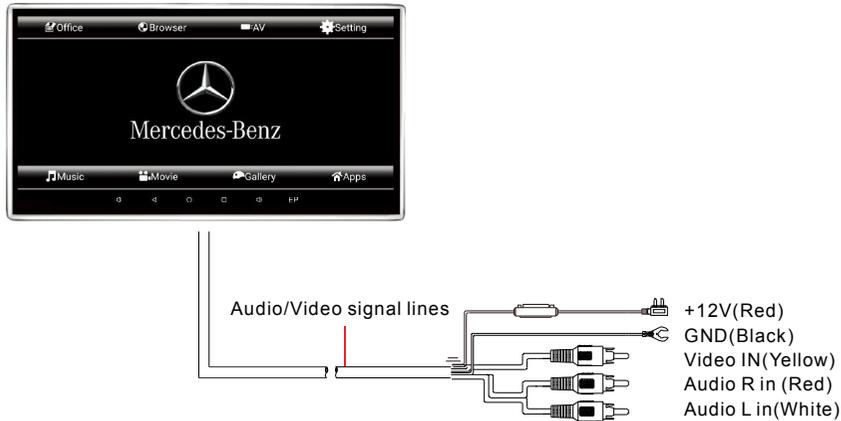

Desktop application




- ① Volume -
- ② Recent visit record
- ③ Return to the home page
- ④ Return to previous Level
- ⑤ Volume+
- ⑥ Audio selection

Desktop applications function diversified,click Settings,main menu can be both switch each other.Users may select any icon to enter as required,or download required contents,By rolling the touch screen from upper left to down,you can enter submenu(see the download content/update).By rolling the touch screen from upper right to down,you can see the icon of brightness\Bluetooth/FM and so on.


support@car-solutions.com

Function Setup

1.Wifi setting:Open Wifi,the system will automatically search for nearby wireless n select the wireless network name that you want,enter the password screen,enter t password and click connect.As shown below:

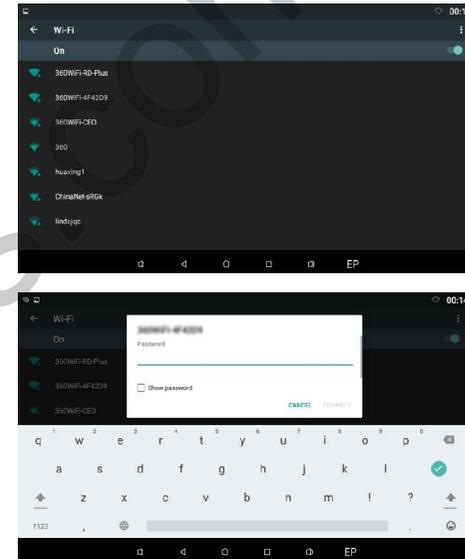

2. Two output ways of audio settings:SPK,FM,Audio former factory default setting customers can re-set according to their needs,to customize the following figure.

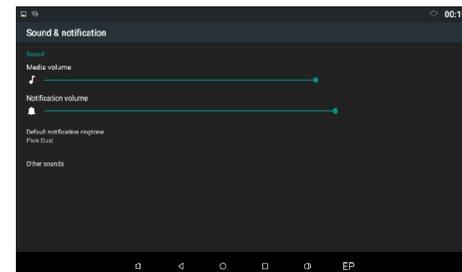

car-solutions.com